

Product features

Stylish design with Gasket construction and a fine, soft and flexible feel. Keycaps and mechanical switches are pluggable. 4000mAh*2 large-capacity lithium battery can be recharged, with power switch, environmental protection and energy saving, saving worry and money, effectively extending battery life. FN+| key combination to switch between 15 RGB light effects. With the drive with music rhythm RGB lighting effect, there are 5 lighting effect modes to choose from under this lighting effect. Cooperate with the drive keys with custom functions and macro definitions. Humanized design of the keyboard, adding a series of commonly used shortcut

Specifications

- Connection: Type-C wired & 2.4G wireless & BT
- With Gasket construction
- Number of keys: 99 keys
- Pluggable mechanical switch
- RGB switchable lighting effects
- Lithium battery: rechargeable lithium battery 4000mAh*2
- Charging voltage/current: DC 5V/≅830mA
- Rated voltage: DC 3.7V
- Battery life: ≅ 53 hours (default lighting effect) ≅ 400 hours (with backlight and side lights off)
- Dimensions: 390.63 (L) × 146.78 (W) × 42.57 (H) ± 0.5mm
- Weight: 1183g
- Operating system: WIN XP/7/8/10/Android/IOS/MAC

Description of shortcut keys (you have to switch to the corresponding mode FN+ ~ /1/2/3 in the upper left corner to be able to long press on the code)


| | | | | |
|----------------------|--|---|--|--|
| Fn+ | ESC | ~ | 1 | 2 |
| Combination Function | restore the default | 2.4G | BT 1# | BT 2# |
| Fn+ | 3 | Q | W | E |
| Combination Function | BT 3# | Android | Windows | Mac |
| Fn+ | R | ↓ | TAB | ↑ |
| Combination Function | IOS | Lighting mode switch | Colour switching | Brightness+ |
| Fn+ | ↓ | ← | → | WIN |
| Combination Function | Brightness- | Speed- | Speed+ | Lock WIN |
| Fn+ | Shift-R | /? | B | Alt-R |
| Combination Function | Switching RGB ambient light bar mode | Switching RGB ambient light bar colours | Switch RGB ambient light bar to power mode | Cycles the brightness of the RGB ambient light bar |
| Fn+ | Ctl-R | DEL | U | I |
| Combination Function | Cycle through RGB ambient light bar speeds | INS | PRTSC | SCRLK |
| Fn+ | O | | | |
| Combination Function | PAUSE | | | |

FN+Q=Android system (Q button red light flashes for 3s), F area single press function and F area FN combination function.

| | | | | | | |
|----------------|--------------------|--------------------|----------------|-------------------|-------------|-------------|
| Key | F1 | F2 | F3 | F4 | F5 | F6 |
| Single press | Screen brightness- | Screen brightness+ | Convert window | Return to Desktop | Brightness- | Brightness+ |
| Fn Combination | F1 | F2 | F3 | F4 | F5 | F6 |
| Key | F7 | F8 | F9 | F10 | F11 | F12 |
| Single press | previous | Play/Pause | Next song | Mute | Volume - | Volume+ |
| Fn Combination | F7 | F8 | F9 | F10 | F11 | F12 |

FN+W=Windows system (W key red light flashes for 3s), F area single press function and F area FN combination function.

| | | | | | | |
|----------------|----------|------------|----------------|---------------|-------------|-------------|
| Key | F1 | F2 | F3 | F4 | F5 | F6 |
| Single press | F1 | F2 | F3 | F4 | F5 | F6 |
| Fn Combination | homepage | email | Convert window | Open Explorer | Brightness- | Brightness+ |
| Key | F7 | F8 | F9 | F10 | F11 | F12 |
| Single press | F7 | F8 | F9 | F10 | F11 | F12 |
| Fn Combination | previous | Play/Pause | Next song | Mute | Volume - | Volume+ |

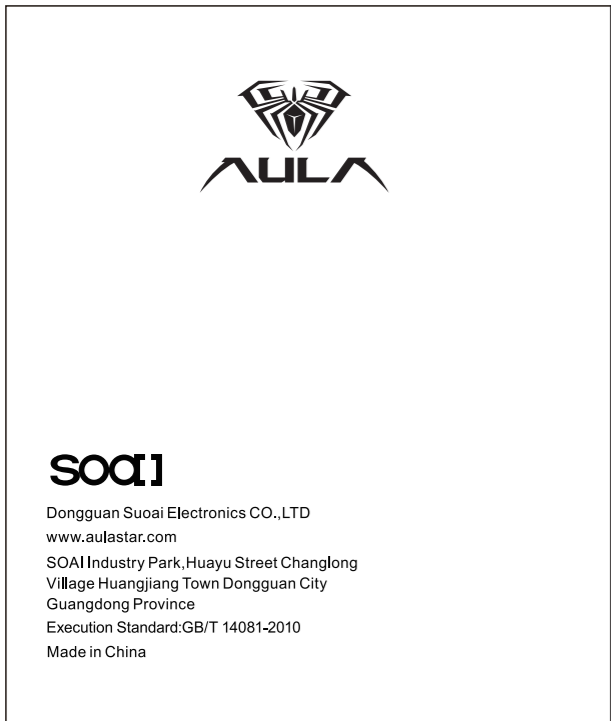

FN+E=Mac system (E button red light flashes for 3s), F zone single press function and F zone FN combination function.

| | | | | | | |
|----------------|--------------------|--------------------|----------------|-------------------|-------------|-------------|
| Key | F1 | F2 | F3 | F4 | F5 | F6 |
| Single press | Screen brightness- | Screen brightness+ | Convert window | Return to Desktop | Brightness- | Brightness+ |
| Fn Combination | F1 | F2 | F3 | F4 | F5 | F6 |
| Key | F7 | F8 | F9 | F10 | F11 | F12 |
| Single press | previous | Play/Pause | Next song | Mute | Volume - | Volume+ |
| Fn Combination | F7 | F8 | F9 | F10 | F11 | F12 |

FN+R=IOS system (R key red light flashes for 3s), F-zone single press function and F-zone FN combination function.

| | | | | | | |
|----------------|--------------------|--------------------|-----------|-------------------|-------------|-------------|
| Key | F1 | F2 | F3 | F4 | F5 | F6 |
| Single press | Screen brightness- | Screen brightness+ | | Return to Desktop | Brightness- | Brightness+ |
| Fn Combination | F1 | F2 | F3 | F4 | F5 | F6 |
| Key | F7 | F8 | F9 | F10 | F11 | F12 |
| Single press | previous | Play/Pause | Next song | Mute | Volume - | Volume+ |
| Fn Combination | F7 | F8 | F9 | F10 | F11 | F12 |

Operating instructions

2.4G mode: the upper left switch is dialled to 2.4G mode, the cyan light of the ~ key blinks slowly, and then press FN+~ key for 3 seconds to enter the code pairing state, then plug in the receiver to finish the code pairing, the cyan light of the ~ key is on for 2s, the 2.4G connection is successful. The factory default has been pairing code.

BT Mode: Top left switch toggle to Bluetooth mode BLE5.0/BLE3.0 (device name AULA-F99 3.0/AULA-F99 5.0), can connect 3 devices: FN+1=BT 1, the blue indicator light under the key is flashing fast, back to the connection is flashing slowly, the blue light is on for 2s when connected, FN+2=BT 2, the blue indicator light under the key is fast flashing, back to connect slow flashing, connect to blue light 2s. FN+3=BT 3, the blue light under the key is flashing fast, back to connect the slow flash, connect the blue light 2s.

Wired mode: Top left switch to centre position = wired mode, white light on "4" button lights up for 2s

Fn+Esc long press for three seconds = Restore default. The original connected BT device save will not be cleared. FN+Shift-R=Switch light bar light mode, FN+/? = switch light bar colour; FN+Alt-R = light bar brightness cycle, FN+Ctl-R = light bar speed cycle. Fn+↑=Brightness+ Fn+↓=Brightness- Fn+←=Speed- Fn+→=Speed+. FN+Q=Android, FN+W=Windows, FN+E=Mac, FN+R=IOS. Fn+Tab=Toggle light effect colour. Fn+WIN-L=Lock/open left WIN window key (Lock WIN indicator light is always on when locking WIN, under WIN system). After switching to Mac/IOS system, WIN-L/ALT-L position is swapped (without locking WIN). FN+B=RGB ambient light bar can show keyboard power level, charging streaming light display. Full long bright green, 5 lights each green light indicates 20% battery. Low battery all red indication.

Charging instructions

1. It is recommended to use only the computer USB port to charge the keyboard.
2. Please do not use fast-charging mobile phone chargers to charge the keyboard.
3. Please do not use inferior non-standard power adapter to charge the keyboard.
4. Please do not use over-voltage and over-current power adapter to charge the keyboard.
5. When charging, please keep away from high temperature equipment.
6. The indicator light is on when charging, the indicator light is off when fully charged.
7. Please turn off the power switch when not in use for a long time.

The above charging instructions also apply to other devices with charging capabilities (keyboard/mouse/headphones/speakers, etc.)

说明书技术要求:

- 1.成品尺寸:80x95mm
- 2.材质:128g铜版纸
- 3.工艺:风琴折(正反印刷)

